


**Seats, Heated Rear , (9AQ),(Q1A),(Q1D),(Q4Q),(4A4)**

From January 2011

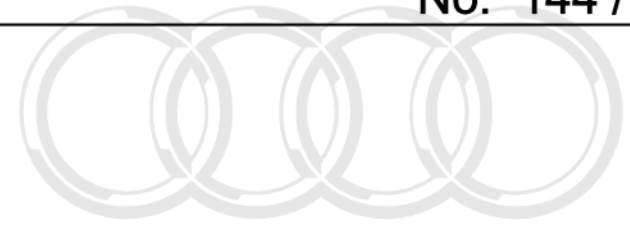

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

**erWin**


# Left Rear Heated Seat Temperature Sensor, Left Rear Bench Seat Heating Element


- E128 Left Rear Heated Seat Regulating Switch
- E265 Rear A/C Display Control Head
- G94 Left Rear Heated Seat Temperature Sensor
- ST1 Fuse Panel 1
- SF11 Fuse 11 (On Fuse Panel F)
- T2fm 2-Pin Connector, Black
- T3r 3-Pin Connector
- T6t 6-Pin Connector, In the Coupling Point for the Left Rear Seat
- T20a 20-Pin Connector
- Z10 Left Rear Bench Seat Heating Element
- Z11 Left Rear Backrest Heating Element

- 34 Ground Connection Under Driver Seat
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- 392 Ground Connection 27 (in Main Wiring Harness)
- 394 Ground Connection 29 (in Main Wiring Harness)
- O12 Connection 1 (in Heated Seats Wiring Harness)
- \* Climate Control, Comfort Climatronic
- \*2 For Vehicles Without Adjustable Seats
- \*3 Refer to Applicable Wiring Diagram for Fuse Positions
- \*4 Depending on Equipment
- \*5 Through May 2014
- \*6 From June 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white  
sw = black  
ro = red  
rt = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
vi = lilac  
ge = yellow  
or = orange  
rs = pink

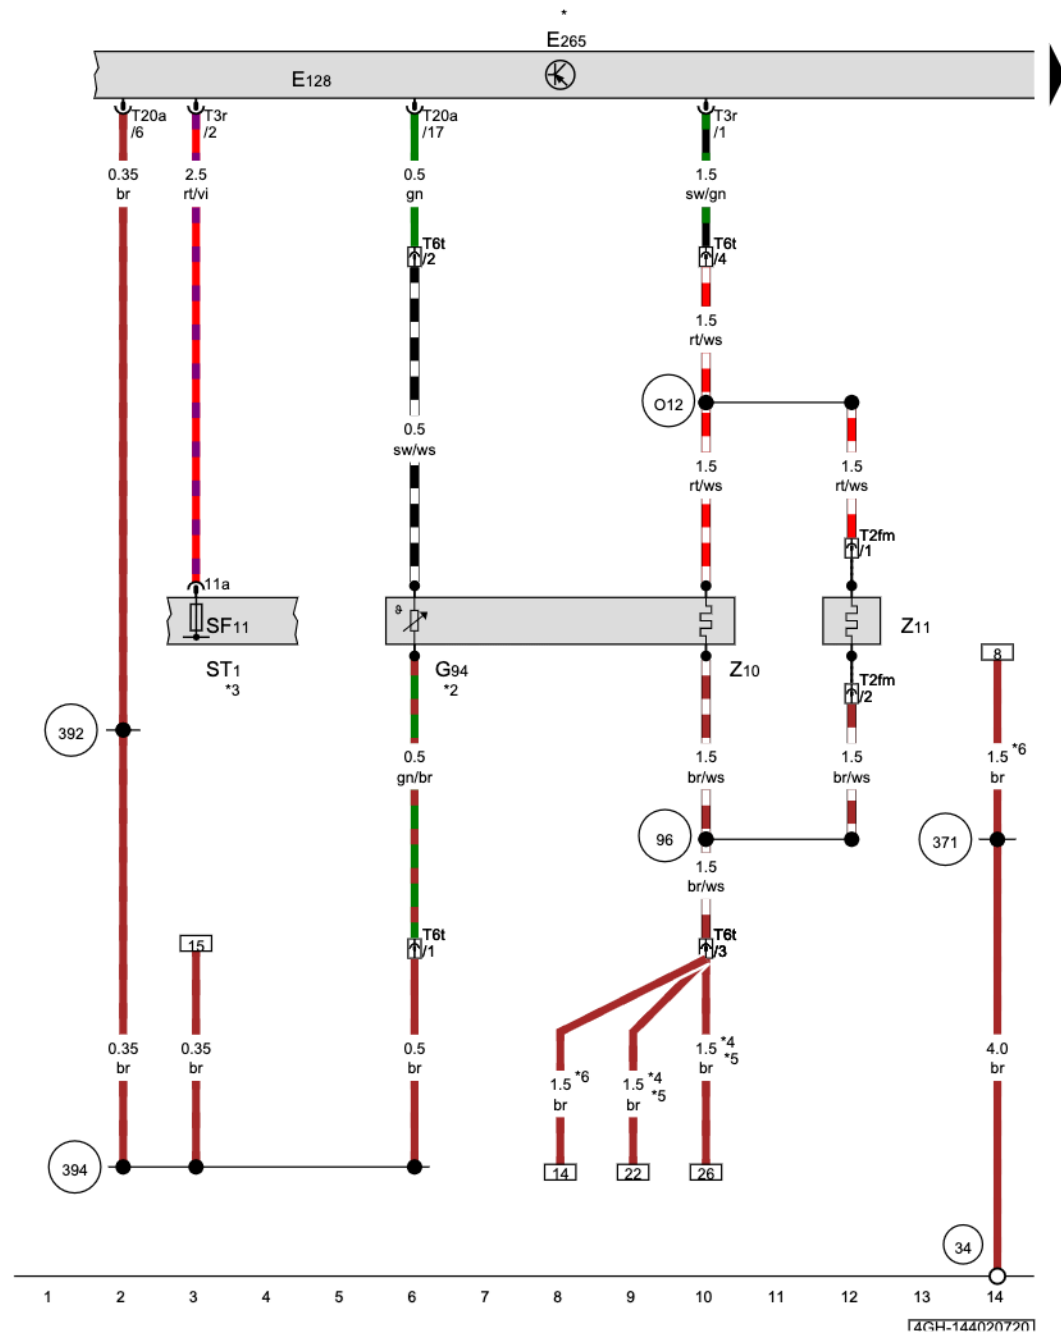

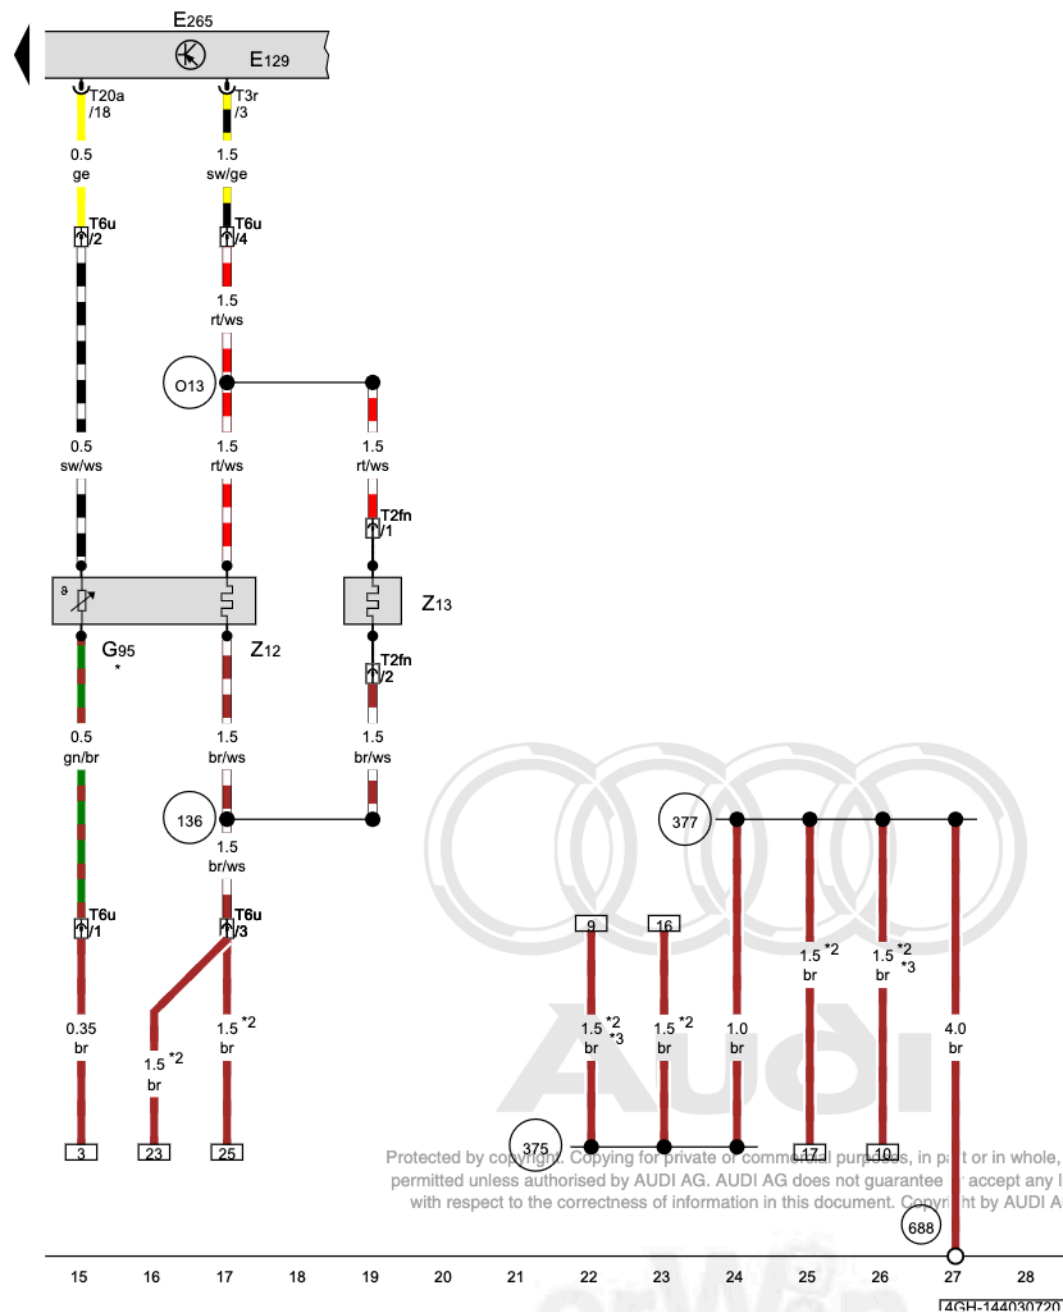

### Right Rear Heated Seat Temperature Sensor, Right Rear Bench Seat Heating Element

- E129 Right Rear Heated Seat Regulating Switch
- E265 Rear A/C Display Control Head
- G95 Right Rear Heated Seat Temperature Sensor
- T2fn 2-Pin Connector, Black
- T3r 3-Pin Connector
- T6u 6-Pin Connector, In the Coupling Point for the Right Rear Seat
- T20a 20-Pin Connector
- Z12 Right Rear Bench Seat Heating Element
- Z13 Right Rear Backrest Heating Element

136 Ground Connection 2 (in Heated Seats Wiring Harness)

375 Ground Connection 10 (in Main Wiring Harness)

377 Ground Connection 12 (in Main Wiring Harness)

688 Ground Connection 2 on Center Tunnel

O13 Connection 2 (in Heated Seats Wiring Harness)

- \* For Vehicles Without Adjustable Seats
- \*2 Depending on Equipment
- \*3 Through May 2014

ws = white  
 sw = black  
 ro = red  
 rt = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 vi = lilac  
 ge = yellow  
 or = orange  
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.